

11 Channel:

Channe 1	Function	Introduction
1	Pan Running	0-255
2	Tilt Running	0-255
3	Running Speed in Pan/Tilt	0-255
4	Dimming	0-255
5	Strobe	0-255
6	Color	
	0-159	Choose color
	160-255	Change the color autotomatically, from slow to fast
7	Gobo	
	0-119	Fixed Gobo
	120-255	Change the pattern autotomatically, from slow to fast
8	Prism motor operation	0-99 off 100-127 on 128-255 The prism rotates from slow to fast
9	7 colour effect	0-126 off 127-255 on
10	Auto Mode	0-59 no effect 60-159 Auto Mode
	Sound Mode	160-255 Sound Mode
11	Reset	250-255(5 seconds)

**Technical parameters:**

**Voltage: AC110-220V, 50-60Hz Power: 120W**

**Light source: 1 \*100W white light bead**

**Pattern: 12 pattern**

**colors: 8 colors**

**Rainbow: 6 colors rainbow effect**

**Prism: 6+12 prism**

**Channel: 11/13 ch**

**X: 540 ° Y: 180 °**

**Control mode: voice, master-slave, self - walking, DMX**

## 100W LED Moving Head Beam Light Gg-100C



Addr	d001-d512	512 Address Set
CHnd	13	13 Channel Set
	11	11 Channel Set
SLnd	Auto	Master Mode
	SL 1	DMX512 Mode
	SL 2	Slave Mode
SHnd	SH 0	Effect0 (Recommend)
	SH 1	Effect 1
	SH 2	Effect 2
	SH 3	Effect 3
	SH 4	Effect 4
	SH 5	Effect 5
Soud	OFF	Close the sound control mode
	ON	Open the sound control mode
SEnS	0-99	Adjust the sensitivity of sound
LEd	OFF	Close the screen after 5 seconds
	ON	Screen open all the time
dISP	no	Display reverse
	YES	Display forward
rPAN	no	X motor forward
	YES	X motor reverse
rTiL	no	Y motor forward
	YES	Y motor reverse
REST	YES	System Reset
TO		Temperature display

Channe	Function	Introduction
1		
1	Pan Running	0-255
2	Pan Fine	0-255
3	Tilt Running	0-255
4	Tilt Fine	0-255
5	Running Speed in Pan/Tilt	0-255
6	Dimming	0-255
7	Strobe	0-255
8	Color	
	0-159	Choose color
	160-255	Change the color autotomatically, from slow to fast
9	Gobo	
	0-119	Fixed Gobo
	120-255	Change the pattern autotomatically, from slow to fast
10	Prism motor operation	0-99 off 100-127 on 128-255 The prism rotates from slow to fast
11	7 colour effect	0-126 off 127-255 on
12	Auto Mode	0-59 no effect
		60-159 Auto Mode
	Sound Mode	160-255 Sound Mode
13	Reset	250-255(5 seconds)

13 Channel: